


# *Reel Sticks*

Installation Guide  
No Tools Needed!



Box Contents

1. Remove lacing from around the tennis post as needed.
2. Hold two cover housing halves (one with reel and one without) together around the net post, approx 20" above ground, with open end facing the net.

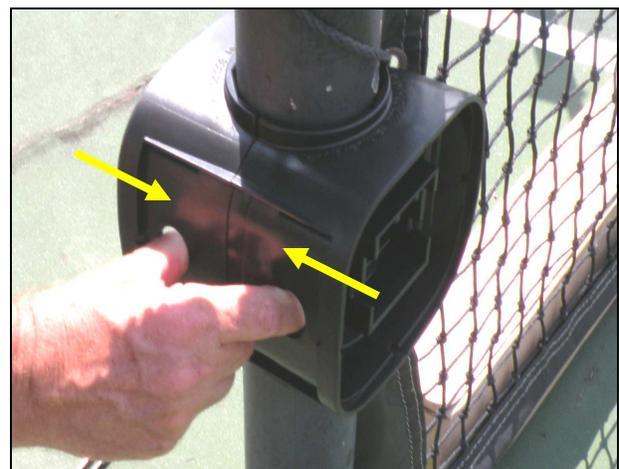

**3. While holding two halves together using the finger holes at the back, thread the tie-wraps through the holes in housing and cinch.**



**Adjust elevation and position, then place 2nd tie-wrap and tighten both firmly by hand.**

**Either cut off the tie-wrap tails, or just thread them through the housing.**




**4. Place foot plate on singles stick, with the end closest to the foam bumpers.**

**Push net cradle onto top of the singles stick.**




5. Pull the cable out with the adjustable fitting. Screw the fitting into the thread in the singles stick, between the foam bumpers. The stick is now attached to the cable.

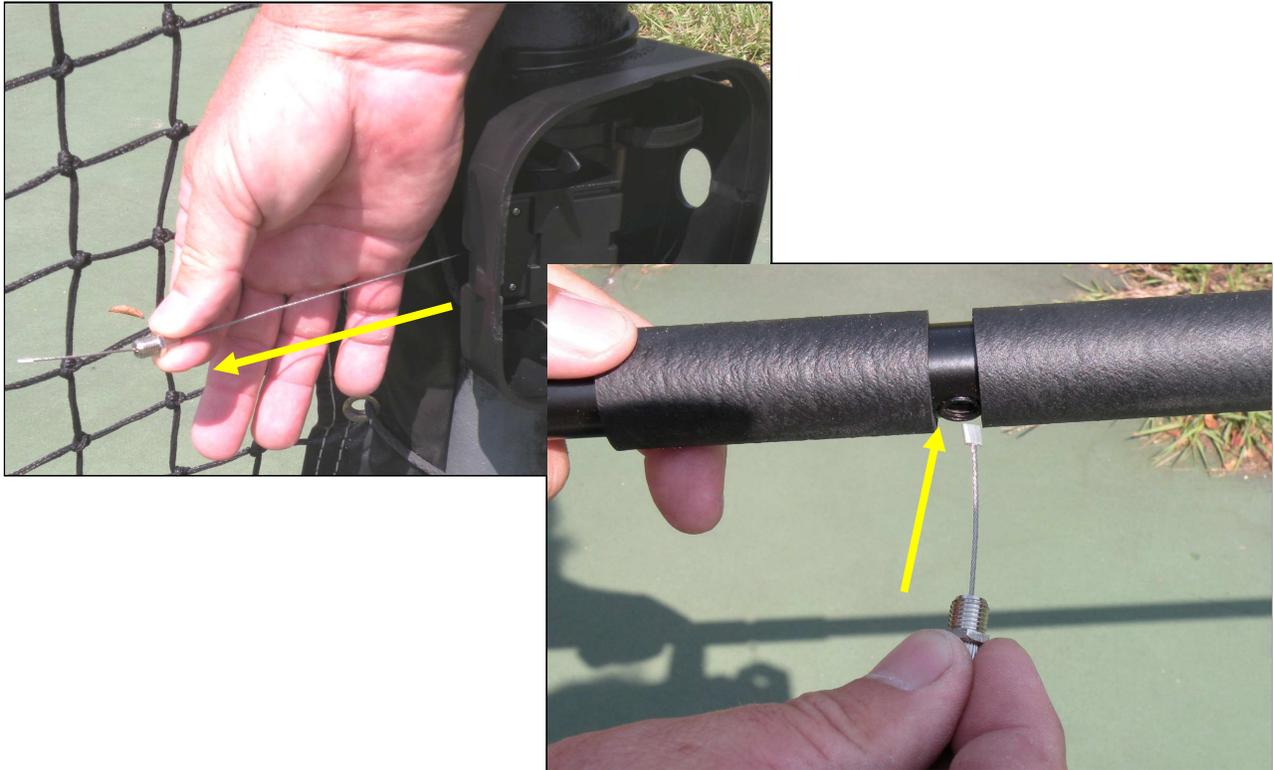


6. Pull the singles stick away from the housing and install it at the correct position. The distance of the singles stick is measured from outside the singles side line exactly 3 feet.


Adjust the cradle and foot plate to these positions relative to the net.

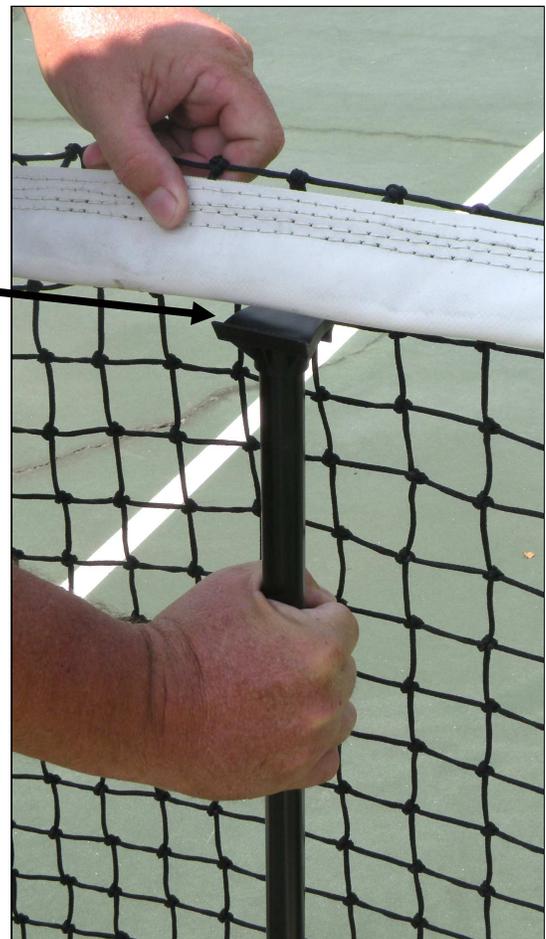

7. The cable fitting is designed so that the cable can only be pushed one-way into the fitting. Unscrew the protection cap of the fitting and slide the cable into the fitting.

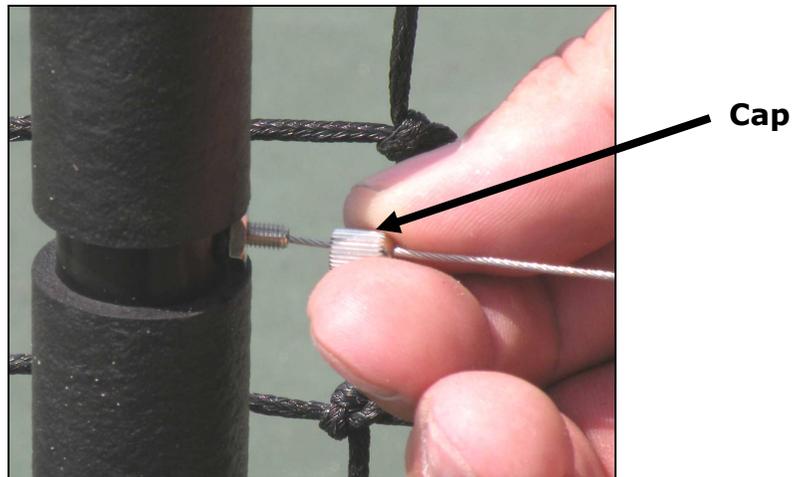

8. Pull the cable away from the housing until it stops. Then feed the loose cable into the fitting until cable is tight. This sets the correct distance for the stick and eliminates future need for measurement.

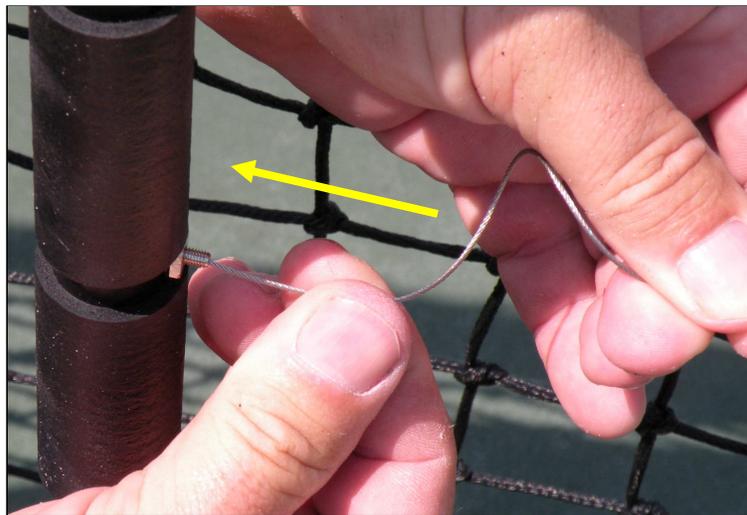

9. Slide the protection cap back and screw into place over the threaded release pin. This prevents the adjustment fitting release pin from accidentally being pushed in, which would release the cable.



- 10. Install the side ad/number and lens. First insert bottom lens clips, then carefully press down on the top clips until they hook into slots.**



- 11. Install front and back ad plates and lenses. Your ad either sticks to the back of the ad plate, or is held in place by the ad plate edging and lens. Carefully push the lens into the housing.**



**Ad Plate**

Replacing the ad:

To remove the front and rear ad plates and lenses, first remove the side lens. Through the finger holes, the ad plates can be pushed outwards and away from the housing.

To replace the reel, detach it from the singles stick. Then remove the front lens, gently pull back the clip and slide the reel out from its slot. Slide the new reel into the slot and adjust the cable again.

